

Table of Contents

Wi-Fi Connection	2
AV Systems	3
Apple TV (Movies, Netflix, Etc.)	4
PlayStation 5	5
Karaoke.....	6
Music / Bluetooth	7
Golf Simulator	9
Remote Control Cheat Sheet.....	11
Pinball Machine	11
Accommodation	11
Air Conditioning.....	11
Under Floor Heating.....	11

Wi-Fi Connection

The Wi-Fi at The Shop is run through Starlink at the house, so harsh weather conditions can impact the performance. Connecting to the Wi-Fi also lets you connect to and control devices like the Apple TV.

Connect by scanning the QR code in camera, or with the login:



Network Name: LynchFamilyWifi

Password: 8e3bd696

AV Systems

The AV systems at The Shop consist of the projector in the grandstand, which has a surround sound system, as well as speakers in the games areas upstairs and downstairs. The input to these is controlled by the amplifier in the black cabinet by the dart board.

To turn on the systems, the small white remote needs to point at the projector and press on, and the 'Denon' remote **needs to be pointed at the cabinet to control the amplifier.**

The AV system has 3 output zones, which can have independent audio sources routed to them, and need to be powered on individually. Clicking the desired zone at the top of the remote switches to controlling that zone, then pressing power will turn that zone on. From there pressing the input source will route that source to that zone, and the volume will control that zone as well. The zones are as following:

Zone Name on Remote	Speaker Location
MAIN	Screen & Grandstand Area
ZONE2	Upstairs Sound
ZONE3	Games Area Sound

To choose an input, first press the zone desired at the top of the remote, then the desired input from the following list.

Input on Remote	Connected Device
MEDIA PLAYER	Apple TV (Netflix, Disney+, Etc)
GAME	Golf iPad
CBL / SAT	Karaoke
CD	Play Station 5
Bluetooth	Bluetooth Music

The following sections have full instructions for setting up each input.

Apple TV (Movies, Netflix, Etc.)

Setting up:

1. Turn on projector (little white remote pointed at projector).
2. On Denon (amplifier) remote, press 'MAIN', then 'POWER', then 'MEDIA PLAYER'.
3. Wake the Apple TV by pressing the back arrow on Apple TV remote (little silver remote), note that the Apple TV remote does not need to point at the amp, unless you try to change the volume using that remote.
4. Holding the back arrow brings you back to the main menu to choose an app.
5. Use the arrows to move around and choose an app, and the button in the middle of the arrows to select.

We have Netflix, Disney+, Neon, TVNZ & SkySport all setup, but sometimes they decide to logout, so if they are feel free to login with your own account, but by all means use ours! You can watch whatever you want on Angus's profile.

You can also airplay to the Apple TV from your Apple device if you are on the Wi-Fi, and can use this method to listen to music if you prefer, just route the MEDIA PLAYER input to zones 2 or 3 accordingly.

PlayStation 5

Setting up:

1. Turn on projector (little white remote pointed at projector).
2. On Denon (amplifier) remote, press 'MAIN', then 'POWER', then 'CD'.
3. Wake the PlayStation by clicking the PlayStation button on any controller, between analog stick.

There are some games on Jared's profile that you can play like Formula1 or any PlayLink game like Knowledge is Power. Avoid Fortnite as to not sully DeathEater's good name.

Feel free to login to your own account on the PlayStation as well.

Turning off:

1. Press PlayStation button, scroll down and along to power, and go into rest mode.
2. On Denon (amplifier) remote, press 'MAIN', then 'POWER'.
3. Turn off the projector (little white remote pointed at projector), you have to click it once and then again to confirm.

Karaoke

Setting up:

1. Turn on projector (little white remote pointed at projector).
2. On Denon (amplifier) remote, press 'MAIN', then 'POWER', then 'CBL / SAT'.
3. On karaoke remote, press power button (pointed at the cabinet).
4. Microphones are on the shelf in the cabinet, hold power button to turn on, and a white light at the bottom turns on when its connected.

There are 2 ways to control the system, using the iPad (**Best**):

1. The iPad mounted by the door has an app where you can choose songs, add to queue, add favourites, search by artist or title.
2. Unlock the iPad by tapping the screen, swipe up from the bottom
3. The passcode is **02 12 69**.
4. Open the "CooKara" app on the home screen, the symbol is a little microphone on a red circle.
5. Wait a few seconds, it should come up with 'Login Success', then you can choose artist or title at the top and type a name to search.
6. Tap on a song, and either tap "Reserve Song" to add it to the queue, or play to play it right now (this kills the current song).
7. Once playing there are controls at the bottom, and the upcoming queue can be viewed with the top left button.

Or you can use the remote (**Backup**)

1. Use the arrow keys on the remote to go to 'NUMBER' on the menu and click enter.
2. Type in the song code and click enter to sing! To find the song code that you want, there is the SingMasters book.
3. To quit a song click the 'home' button at the top of the remote.

Turning off:

1. Turn off microphone by holding power button until white light turns off, and put back on the stand in the cabinet.
2. Turn off karaoke with remote, hold power button (pointed at the cabinet).
3. On Denon (amplifier) remote, press 'MAIN', then 'POWER'.
4. Turn off the projector (little white remote pointed at projector), you have to click it once and then again to confirm.

Music / Bluetooth

Typically, the music will want to be played in either the upstairs or downstairs game areas (ZONE2 & ZONE3 accordingly). This can be done without interrupting anything happening on the projector, such as golf or PlayStation.

Pairing a **new** Bluetooth device:

1. To pair a new device, you need to have Bluetooth on the main zone for a moment which will interrupt the projector. On Denon (amplifier) remote, press 'MAIN', then 'POWER', then 'Bluetooth'.
2. Looking at the display on the amp, wait for it to load into music mode, it will say 'Bluetooth, No Connection' when its ready.
3. On the remote click 'OPTION', then scroll up and down to find 'Pairing Mode' (it should start on that anyway). Click 'Enter'.
4. Find the amp in the Bluetooth settings on your device, the name is **Denon AVC-X4700H**, connect to it and it will probably start playing straight away to main.
5. Now, it is best to quickly turn the whole amp off and on again, press 'MAIN', then 'POWER' and then 'POWER' again to turn back on.

Setting up **Bluetooth**:

1. On Denon (amplifier) remote, press 'ZONE2', then 'POWER', then 'Bluetooth'.
2. If your device has been paired before, just go into settings on your device and select the amp (Denon AVC-X4700H).
3. To add playing on the downstairs speaker, press 'ZONE3', then 'POWER', then 'Bluetooth'. (Music may stop when you do that, if it does just go back to settings on your device and reconnect).
4. Changing the volume on your device should control all zones connected to the Bluetooth source, however you can change them independently with the remote by selecting the zone button and then changing the volume on the remote.

Setting up **All Zone Stereo**:

1. For the full power of the system to play music (All of the surround sound speakers in the grandstand, and optionally the other 2 zones) there is a special mode that blocks the amp from doing anything else called 'All Zone Stereo'.
2. On Denon (amplifier) remote, press 'MAIN', then 'POWER', then 'Bluetooth'.
3. Connect from phone as normal and start playing music.
4. On the remote click 'OPTION', then scroll down to find 'AVR Options', click 'Enter'.
5. Scroll down to find 'All Zone Stereo', click 'Enter'.
6. Scroll up and check or uncheck the other 2 zones, then scroll back down to 'Start' and click 'Enter'.

7. You can turn zone 2 and 3 on and off freely without stopping MAIN, and the volumes are all independent like with other modes.

Turning off:

1. If you turned on All Zone Stereo, it needs to be turned off by going through the same process. On the remote click 'OPTION', then scroll down to find 'AVR Options', click 'Enter', scroll down to find 'All Zone Stereo', click 'Enter', then select 'Stop' and click 'Enter'.
2. On Denon (amplifier) remote, press 'MAIN', then 'POWER', and repeat for any zones that were turned on until the light goes red and the display turns off.

Golf Simulator

The grandstand area at The Shop is able to be setup as an indoor golf simulator. Please, if you do not know how to swing a golf club, and no one around does either, take care as swinging wrong can cause you to hit walls / the grandstand.

There are a few parts to setting the system up, the area and sensor, the AV setup, and the actual golf app and games.

Setting up the area & sensor:

1. To start with, the bleachers on the grandstand need to be moved out of the way. They slide easily on the rails, with one person at each end pushing. The ideal setup is to have the top 3 rows pushed all the way back, with the next row having just the pillow sticking out, and then the bottom row aligned to rest feet on. See photo A.
2. Run the extension lead and USB charger for the sensor under the bleachers. Don't plug it in yet.
3. Place the sensor (FlightScope) so that the front is just covering the tape mark on the ground. It should be centred on the tape and pointing straight ahead. See photo B.
4. Hold down the power button until it beeps and the lights come on, there should be a green light on the left and the battery level will show on the other 4. If it doesn't, plug it in to charge for a while then repeat.
5. At this point, it is okay to plug the USB cord in. The battery lights should all turn blue to indicate that it's charging (and is powered from the wall during play).
6. Finally, set the angle of the stand. Use the angle setting tool and push it down on top. This sets the angle of the sensor correctly. Remove it once the angle is set and make sure it is still aligned with the tape. See photo C

A:



B:



C:



Setup the AV and iPad:

1. Turn on projector (little white remote pointed at projector).
2. On Denon (amplifier) remote, press 'MAIN', then 'POWER', then 'GAME'.
3. The iPad mounted by the door runs the golf simulator software, and is where you configure the game. The iPad screen is cast to the projector.
4. Unlock the iPad by tapping the screen, swipe up from the bottom
5. The passcode is **02 12 69**.
6. On the iPad, go into 'Settings', then 'Wi-Fi', then wait for the network '**FS M2-023197**' to appear. Connect to that network.
7. Wait and make sure that it connects, when the tick appears next to the name. Then you can return to the home screen by swiping from the bottom.

Remote Control Cheat Sheet

Pinball Machine

1. Power switch is located under the right speaker

Accommodation

Air Conditioning

Under floor Heating